



AP-309524 (Installation Instructions for Colorado Lift Shackles)

	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.		CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov			

1. Lower and remove spare tire.



AP-309524

2. Unfasten bottom bolts of shocks using a 21mm tools to allow free movement.



3. Using jack stands or a lift, support the weight of the truck so the rear tires are just touching the ground. Using 21 mm tools, remove the rear shackles.




4. Remove rear most exhaust hanger.




5. Install longer exhaust hanger in the same location.



6. Install rear shackles with 22mm tools, torque all bolts to 118 lb-ft.

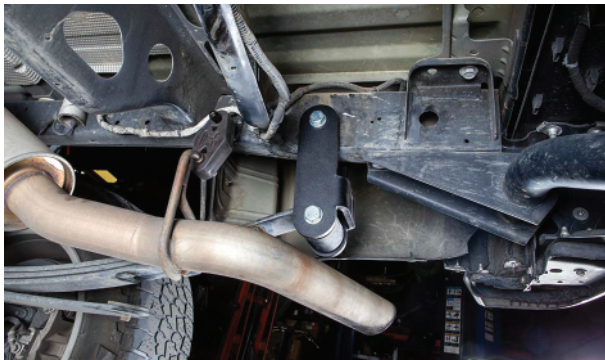

7. Lower truck back down so the shackles are supporting the trucks weight. That will allow you to re-attach the shocks at the lower mounting points, torque to 118 lb-ft.

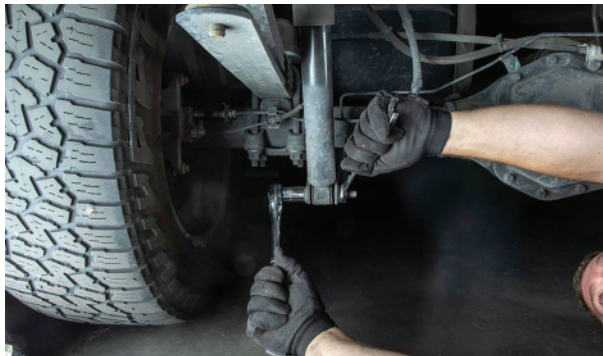



8. Reinstall the spare tire.

