




INSTALLATION INSTRUCTIONS FOR 2015-2019 GMC 2500 TAILGATE TABLE, KITS AP-310819, AP-310820, AP-310821, AP-310822

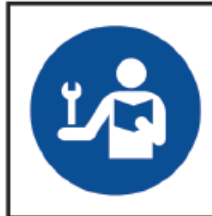

NOTICE

Read instructions completely before installing this product. Refer back to the instructions frequently during installation.



CAUTION


Flying Object Hazard.
Fluid Splash Hazard.
Wear safety glasses at all times when working on vehicle.



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



1. Remove the (8) screws holding the access panel to the tailgate. These screws will not be reused. **NOTE:** Do not remove the access panel after you remove the screws.

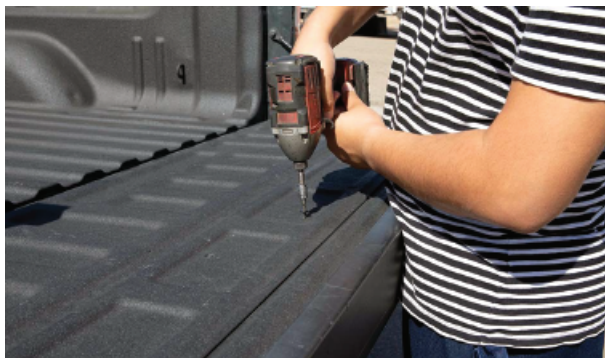

AP-310862

2. Place the All-Pro Tailgate Table onto the tailgate and align the mounting holes in the table with the holes in the tailgate.



3. Install the supplied (8) Torx drive screws to secure the tailgate table to the tailgate. Installing the screws may be easier if you initially start all the screws, then tighten them. Be careful not to over tighten the screws and strip the plastic nuts in the tailgate.



4. If desired, install the (4) supplied sheet metal screws into the pockets at the top of the tailgate table. These screws are meant to provide increased holding strength for the tailgate table but not necessary for most applications.

