




951-658-7077 | 5356 E. Pine Ave Fresno, CA 93711

ALL-PRO
OFF-ROAD

Toyota Land Cruiser FJ80 Overland Tailgate Table Installation Instructions

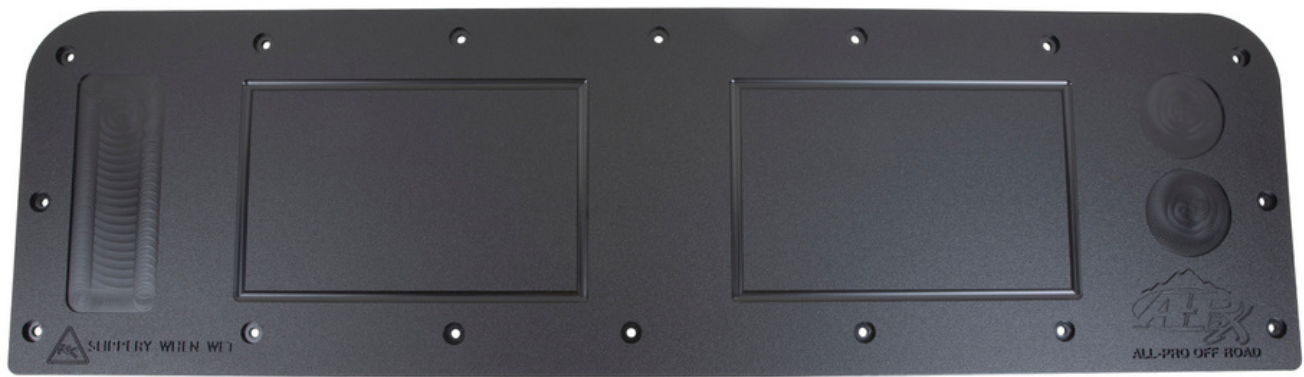

	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.		CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov			

AP-312389

ALL-PRO OFF-ROAD

5356 E PINE AVE • FRESNO, CA • 93727

TOLL FREE • (951) 658-7077 WWW.ALLPROOFFROAD.COM

STEP 1

Remove the existing carpet panel.

Note: This will be easiest with a rivet popper tool to remove the carpet panel.



AP-312389

ALL-PRO OFF-ROAD

5356 E PINE AVE • FRESNO, CA • 93727

TOLL FREE • (951) 658-7077 WWW.ALLPROOFFROAD.COM

STEP 2

Position the new panel in alignment with the pre-existing holes.

STEP 3

Insert the provided push rivets into each hole to securely fasten the new panel in.



AP-312389

ALL-PRO OFF-ROAD

5356 E PINE AVE • FRESNO, CA • 93727

TOLL FREE • (951) 658-7077 WWW.ALLPROOFFROAD.COM