


Jimny Rear Bumper

(SKU# LROR-307802 & LROR-307803)



Installation Instructions

	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------

	CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------

	WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------

Step 1

Remove stock bumper.



Step 2

Slide bumper mount into rear portion of frame. Secure with 9/16" and M12 hardware provided.




Step 3

Repeat on opposite side.

Step 4

Install bumper center structure onto bumper mounts using supplied 1/2" hardware.

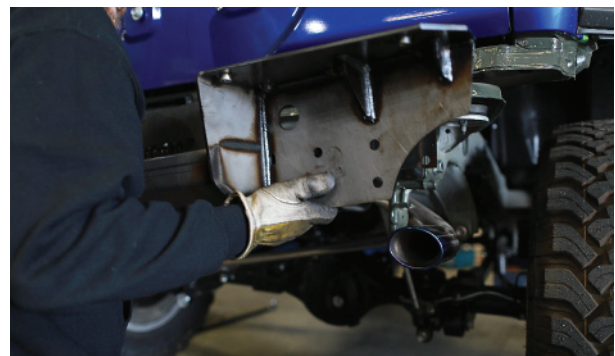

LROR-307828-INS

Step 5

Install u-bolts on either side.



Step 6

The holes are slightly oversized so that the bumper to body alignment can be adjusted for the best fit.



Step 7

It would be suggested at this time to wire the lights. You can wire the lights directly into the harness or install a plug so that the lights can be easily removed in the future. See chart below for wiring info.

Passenger		
	Vehicle wire color	LED Light wire color
	Green	Green
	Brown	Blue
	Pink	Black
	Blue	Red
	Black	White
Driver		
	Vehicle wire color	LED light wire color
	Green	Green
	Brown	Blue
	Red	Black
	Blue	Red
	Black	White

Step 8

Remove screws from light and drill using supplied drill bit.



Step 9

Install lights into bumper side pieces using supplied 10-24 hardware.

Step 10

Install Bumper side piece onto bumper center structure. It is recommended to loosely install all hardware before fully tightening any hardware for the sides.



Congratulations

We hope you enjoy your Low Range Off-Road Jimny Rear Bumper.



As always, If you experience any difficulty during the installation of this product please contact Low Range Off-Road Technical Support at 801-805-6644 M-F 8am-5pm MST. Thank you for purchasing from Low Range Off-Road.



These instructions are designed as a general installation guide. Installation of many Low Range Off-Road products require specialized skills such as metal fabrication, welding and mechanical trouble shooting. If you have any questions or are unsure about how to proceed, please contact our shop at 801-805-6644 or seek help from a competent fabricator. Using fabrication tools such as welders, torches and grinders can cause serious bodily harm and death. Please operate equipment carefully and observe proper safety procedures.

Rock crawling and off-road driving are inherently dangerous activities. Some modifications will adversely affect the on-road handling characteristics of your vehicle. All products sold by Low Range Off-Road are sold for off road use only. Any other use or application is the responsibility of the purchaser and/or user. Some modifications and installation of certain aftermarket parts may under certain circumstances void your original dealer warranty. Modification of your vehicle may create dangerous conditions, which could cause roll-overs resulting in serious bodily injury or death. Buyers and users of these products hereby expressly assume all risks associated with any such modifications and use.

Revised 07/18/13© Copyright 2013 Low Range Off-Road, LC All Rights Reserved

